

Lockbox Instructions

C&O Canal Trust

11/2024



To open our new lockboxes:

- Tap and hold your finger to the screen for one second or until the keys illuminate (may be difficult to see in direct sunlight.)
- Press the “<” button in the lower left-hand corner several times to ensure the code is clear.
- Type “00” followed by the four-digit code from your registration email. If you have a six-digit code, there is no need to enter “00”. The screen will beep after each number is pressed.
- Press the lock icon in the lower right-hand corner to unlock. A long beep followed by a mechanical unlock noise will signal a successful entry.
- Pull the front panel towards yourself using the finger-slots on the side of the device.
- To close, simply push the panel back in place gently. The lockbox will automatically lock itself.



HOW TO UNLOCK

- **Tap and hold your finger to the screen for one second or until the keys illuminate**
- **Press the “<” button in the lower left-hand corner several times to ensure the code is clear.**
- **Type “00” followed by the four-digit code from your registration email. If you have a six-digit code, there is no need to enter “00”. The screen will beep after each number is pressed.**
- **Press the lock icon in the lower right-hand corner to unlock. A long beep followed by a mechanical unlock noise will signal a successful entry.**
- **Pull the front panel towards yourself using the finger-slots on the side of the device.**
- **To close, simply push the panel back in place gently. The lockbox will automatically lock itself.**



CÓMO DESBLOQUEAR

- **Mantenga el dedo pegado a la pantalla durante un segundo o hasta que se iluminen las teclas**
- **Pulse varias veces el botón «<» en la esquina inferior izquierda para asegurarse de que el código es claro.**
- **Escriba «00» seguido del código de cuatro dígitos de su correo electrónico de registro. Si tiene un código de seis dígitos, no es necesario introducir «00». La pantalla emitirá un pitido después de pulsar cada número.**
- **Pulse el icono del candado en la esquina inferior derecha para desbloquear. Un pitido largo seguido de un ruido mecánico de desbloqueo indicará que la entrada se ha realizado correctamente.**
- **Tire del panel frontal hacia usted utilizando las ranuras para los dedos situadas en el lateral del dispositivo.**
- **Para cerrarla, empuje suavemente el panel hacia atrás. La caja se cerrará automáticamente.**