

Lockbox Instructions

C&O Canal Trust

11/2024



To open our new lockboxes:

- Tap the screen several times to illuminate the keypad.
- Press the “<” button in the lower left-hand corner several times to ensure the code is clear.
- Type “00” followed by the four digit code from your registration email. The screen will beep after each number is pressed.
- Press the lock icon in the lower right-hand corner to unlock. A long beep followed by a mechanical unlock noise will signal a successful entry.
- Pull the front panel towards yourself using the finger-slots on the side of the device.
- To close, simply push the panel back in place gently. The lockbox will automatically lock itself.



HOW TO UNLOCK

- 1] Tap Screen Until Keys are illuminated**
- 2) Press the “<” button several times to ensure code is cleared**
- 3) Enter two zeros “00” followed by the four digit PIN provided in your registration email.**
- 4) Press the lock icon in the bottom right-hand corner of the screen.**
- 5) Box will automatically unlock. Pull panel from the two side finger slots to open. Lockbox will automatically lock when closed.**



CÓMO DESBLOQUEAR

- 1] Toca la pantalla hasta que se enciendan las teclas.
- 2) Pulsa varias veces la tecla «<» para borrar el código.
- 3) Introduce dos ceros «00» seguidos del PIN de cuatro dígitos proporcionado en tu correo electrónico de registro.
- 4) Pulse el icono del candado en la esquina inferior derecha de la pantalla.
- 5) La caja se desbloqueará automáticamente. Tire del panel desde las dos ranuras laterales para los dedos para abrirlo. La caja se bloqueará automáticamente al cerrarse.